



## Installation instruction

- The hinges are delivered without fixing the 0-position to enable a precise fixing of the notch after the installation.
- Hinges have to be fixed perpendicular and in balance. Level the shower door. Move the door toward the desired 0-position and afterwards securely tighten the screws (1) of both hinges. The 0-position can also be over expanded to increase the contact pressure. In this case the door has to be pushed toward the inside over the desired position past the desired 0-position. If you mounted the strike profile before that remove it again before positioning the door. If you use Atlantica hinges you can repeat that process a number of times.

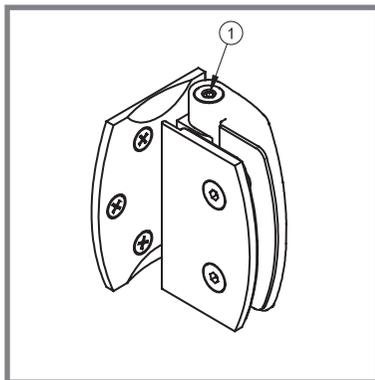



- The hinges are prepared for 8 mm tempered glass.
- Atlantica hinges should only be used with seals and if necessary with a stopper to prevent the user from overexpanding the door or injuring the edge of the glass by pressing toward the inside.
- It is not necessary to notch the seals to pass the hinges. The seals can be clipped on the edge of the glass in full length – through the hinges.
- If clamps with slotted holes (2) are used glue cover plate (3) after installation with some silicone.
- Screws for wall mounting are only delivered if explicitly ordered and against extra charge, because we do not know the type of the wall or the substructure. The structure of the wall and the usability of the screws always have to be tested by the installer. We assume no liability. The installation should always be done by a professional craftsman.

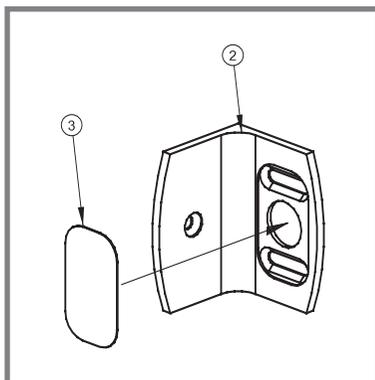

Technical changes remain reserved!

## Montageanleitung

- Die Beschläge werden ohne Fixierung der Rasterung ausgeliefert, um eine präzise Einstellung der Nullstellung bei der Montage zu ermöglichen.
- Bänder lotgerecht und seitlich in der Waage montieren! Duschtür ausrichten, Tür in die gewünschte Nullstellung bewegen und anschließend bei beiden Bändern die Arretierungsschraube (1) fest anziehen. Die Nullstellung kann auch auf Wunsch etwas „überdehnt“ werden, um den Anpressdruck zu erhöhen. In diesem Fall muss die Tür vor der Arretierung etwas über die gewünschte Position nach innen gedrückt werden. Bereits montierte Anschlagprofile zu diesem Zweck noch einmal entfernen. Bei Atlantica-Bändern kann dieser Vorgang zwecks Korrektur auch mehrfach wiederholt werden.
- Die Beschläge sind vorgerichtet für 8 mm Ein-scheibensicherheitsglas
- Bei Atlantica-Bändern unbedingt Dichtprofile und gegebenenfalls einen Anschlag verwenden, um eine Aushebelung der Tür durch Druck von außen bzw. eine entsprechende Beschädigung der Glaskante zu verhindern.
- Bei der Montage der Dichtprofile ist es nicht nötig, diese im Bandbereich auszuklinken. Das Profil lässt sich durch das Band durchführen.
- Falls Winkel mit Langlochbefestigung (2) verwendet werden, nach der Montage Abdeckplatte (3) mit einem Tropfen Silikon einkleben.
- Befestigungsschrauben für die Wandbefestigung werden grundsätzlich nur auf Wunsch und gegen zusätzliche Berechnung mitgeliefert, da wir die Wand- bzw. Unterkonstruktion nicht kennen. Deren Beschaffenheit und die Verwendbarkeit der Schrauben muss grundsätzlich bauseits geprüft werden. Wir übernehmen ausdrücklich hierfür keine Haftung. Die Montage sollte nur von einem Fachmann durchgeführt werden.

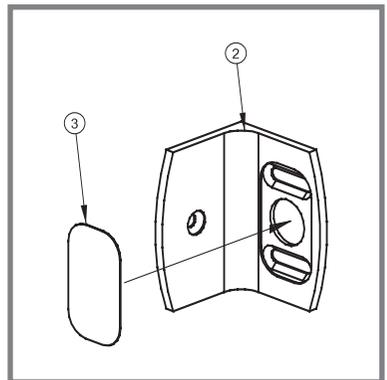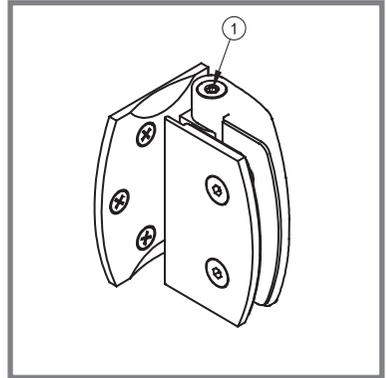

Technische Änderungen vorbehalten!